
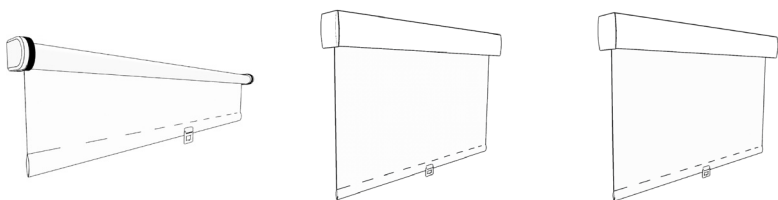


Roller Express Cordless Operated Shade Installation Instructions

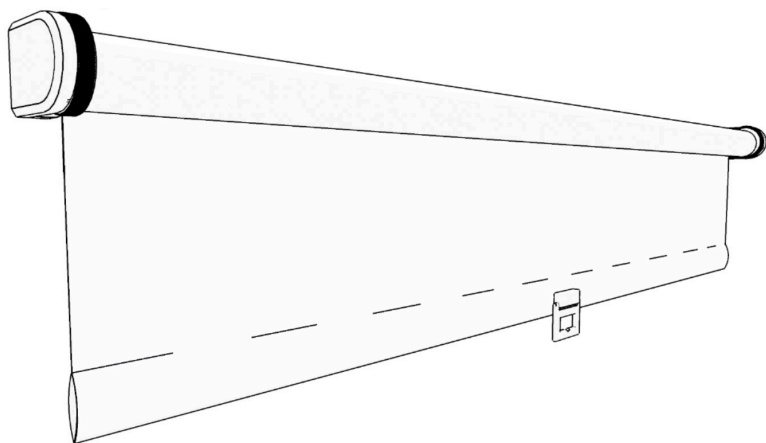

1. Cordless Operated Open Roll
2. Cordless Operated with Deco Fascia
3. Cordless Operated with Contoured Valance

GETTING STARTED


Make sure you have all of the parts and tools required to install your shades.

Tools:

- Measuring Tape
- Power Drill
- #2 Phillips Screwdriver or
- ¼" Hex Head




General Parts to Install Your Shade:

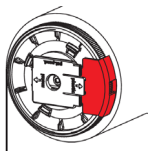


DO NOT REMOVE
Red Clip




Installation Brackets

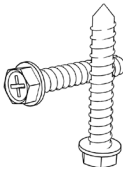


Screws

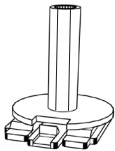

Idler

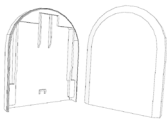

Bracket Cover
(Outside mounted only)

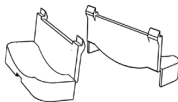


Screw Covers
(Outside mounted only)

Deco Fascia Installation Parts (supplied if Deco Fascia was ordered):




Deco Fascia

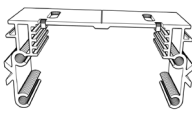


Deco Fascia
Installation Brackets



Outside Mount
Backplate
(if ordered)

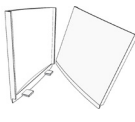

Plastic/Metal
Returns
(if ordered)

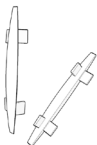

Corner Pieces
(Outside mounted only)

Contoured Valance Installation Parts (supplied only if Contoured Valance was ordered):




Contoured
Valance



Installation Brackets




Outside Mount
Brackets *(if ordered)*

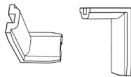

Corner Connectors
(if ordered)

SECTION 1

CORDLESS OPERATED SHADE - OPEN ROLL

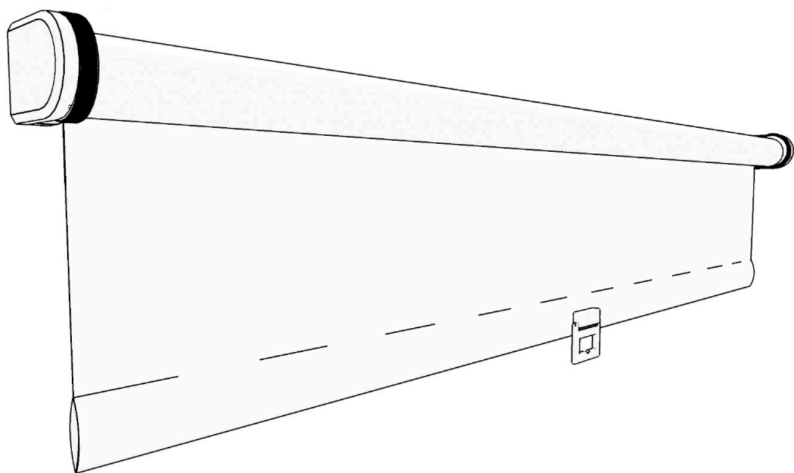

If your shades were ordered with Deco Fascia, proceed to Section 2

If your shades were ordered with Contoured Valance, proceed to Section 3


STEP 1

INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.

If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

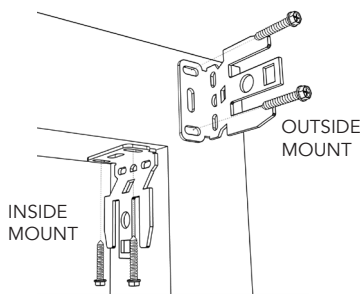

STEP 2


SHADE PLACEMENT

Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the right side installation bracket (as shown). You should hear a click once it is securely installed.

Grab second Idler and insert onto left side clutch opening (as shown).

Grab the roller shade and insert the right side of the shade into the idler (as shown)


Insert the opposite end of the shade onto the bracket as shown; THE RED PLASTIC TENSION HOLDER WILL DISENGAGE ONCE THE BRACKET HAS BEEN INSTALLED.

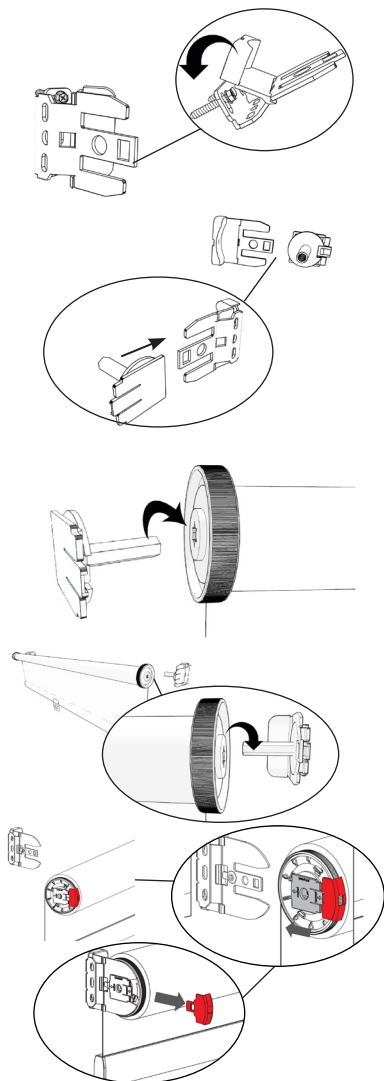

STEP 3

ADDITIONAL ITEMS


If your shade was ordered as Outside Mount, locate the bracket covers and install them onto the installation brackets as shown.

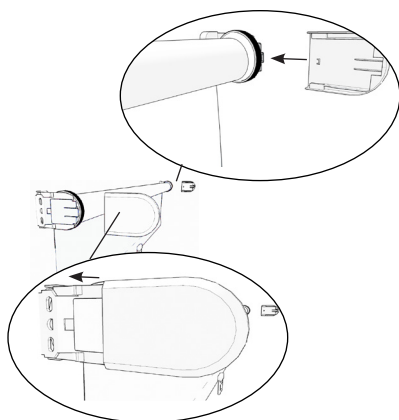

STEP 4

OPERATING INSTRUCTIONS

Pull the shade from the bottom handle and let go to lock it into the desired length.

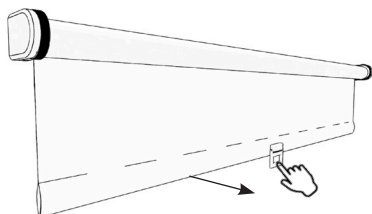


STEP 5

ADJUSTING TENSION


Your cordless shade was produced with the limits already set. If you need to change or adjust this at any time, please follow the steps below:

To lower tension or speed, turn the left side wheel towards the back of the shade.

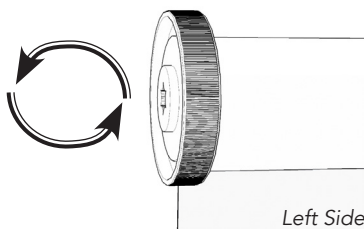

To add tension or speed, turn the left side wheel towards the front of the shade while holding the bottomrail


To shorten the length of the shade, turn the right side wheel towards the front of the shade.

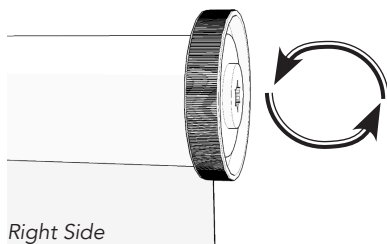

To lengthed the shade, turn the right side wheel towards the back of the shade.

SECTION 2

CORDLESS OPERATED SHADE - WITH DECO FASCIA

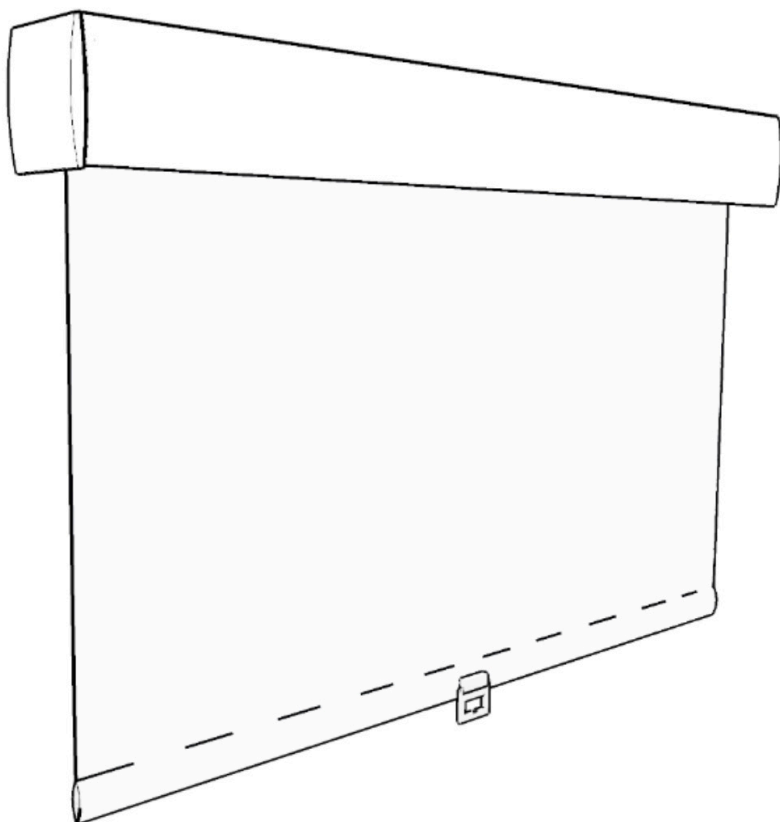


If your shades were ordered with Contoured Valance, proceed to Section 3
If your shades were ordered Open Roll, refer back to Section 1


STEP 1

DECO FASCIA BRACKET INSTALLATION

Using the Drill, secure the Fascia installation brackets with the supplied screws (as shown).

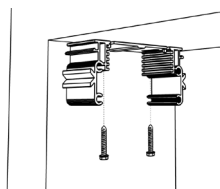


Inside Mount
(Vertical installation - Typical installation)

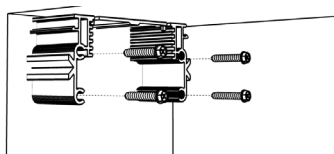

Inside Mount
(Horizontal installation - Possible with longer installation screws)


Outside Mount (Backplate Placement)

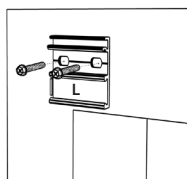

Using the drill secure the backplates to the opening - Each is marked Left or Right. Be sure to check that they are level.

Outside Mount (Fascia Bracket Placement)

Slide the Fascia bracket onto the outside mount bracket. Slide all the way to the edge of the bracket until it stops.

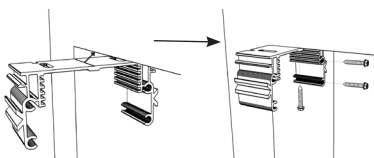

Inside Mount Shade- Outside Mount Bracket (Fascia Bracket Placement and installation)

Position the top line against the front edge of the wall then secure the bracket with installation screws as shown.




STEP 2

SHADE BRACKET INSTALLATION

Once the Fascia installation brackets are secured, insert the shade installation brackets into the slots of the Deco Fascia bracket as shown.

For outside mounted shades, the shade bracket should be inserted into the top slot. **Please note: The bracket should be inserted all the way into the slot in order for it to be positioned to stay in place.*


For inside mounted shades, the shade bracket can be moved up or down to perfectly level the shade as needed.

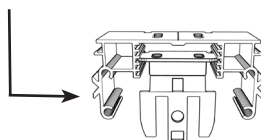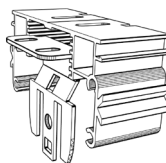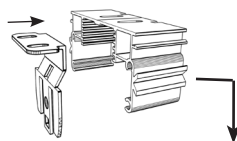


STEP 3

SHADE PLACEMENT


Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the right side installation bracket (as shown). You should hear a click once it is securely installed.

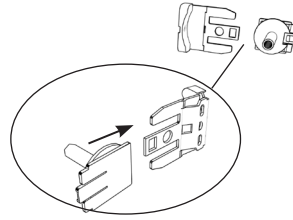

Grab second Idler and insert onto left side clutch opening (as shown).

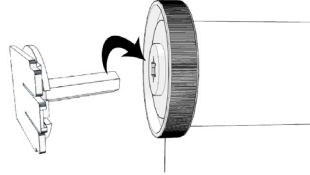


Grab the roller shade and insert the right side of the shade into the idler (as shown)

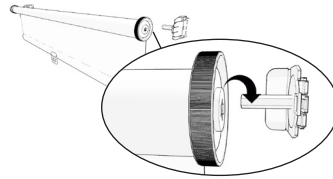

Insert the opposite end of the shade onto the bracket as shown;


THE RED PLASTIC TENSION HOLDER WILL DISENGAGE ONCE THE BRACKET HAS BEEN INSTALLED.

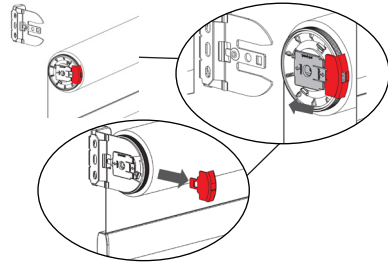

STEP 4

OPERATING INSTRUCTIONS

Pull the shade from the bottom handle and let go to lock it into the desired length.

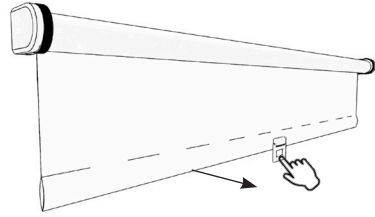


STEP 5


ADJUSTING TENSION

Your cordless shade was produced with the limits already set. If you need to change or adjust this at any time, please follow the steps below:

To lower tension or speed, turn the left side wheel towards the back of the shade.

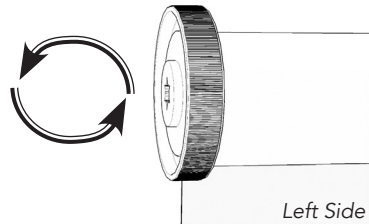

To add tension or speed, turn the left side wheel towards the front of the shade while holding the bottomrail

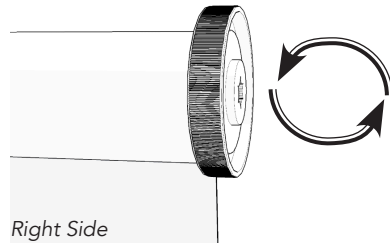

To shorten the length of the shade, turn the right side wheel towards the front of the shade.


To lengthed the shade, turn the right side wheel towards the back of the shade.

STEP 6

DECO FASCIA INSTALLATION

INSIDE MOUNT


Inside Mounted fascia can be installed by snapping the back groove onto the front notch of each installed Fascia bracket. *You will hear a click when it is installed*

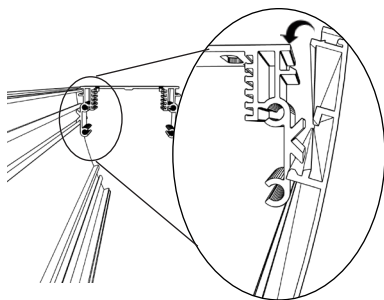


OUTSIDE MOUNT *(if ordered)*

Attach the return with the supplied connector.

- Metal returns will include a plastic corner connector *(outside mount only)*
- Plastic returns simply snap on the end of the fascia *(inside mount shade with outside mounted fascia)*

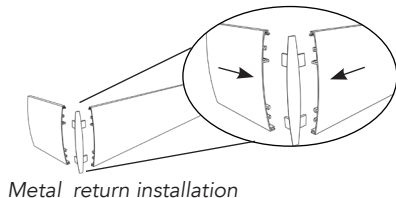


Metal return installation

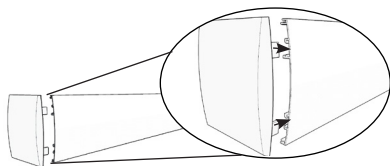

Plastic return installation


Install the fascia by snapping the back groove onto the front notch of each installed Fascia bracket. *You will hear a click when it is installed*

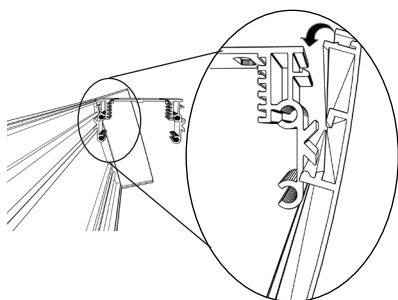

Fascia installation

SECTION 3

CORDLESS OPERATED SHADE WITH CONTOURED VALANCE

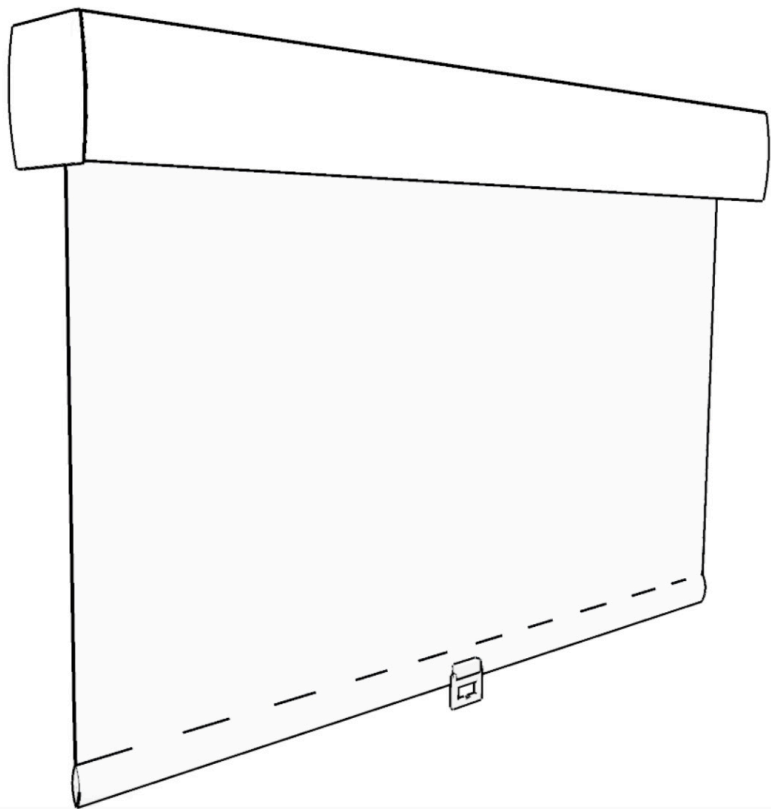

If your shades were ordered with Deco Fascia, refer back to Section 2
If your shades were ordered Open Roll, refer back to Section 1



STEP 1

INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.


If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

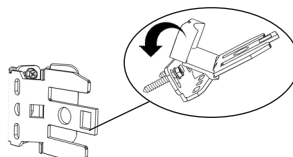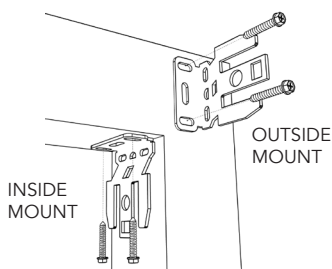

STEP 2

CONTOURED VALANCE INSTALLATION

Prior to installing the Installation Brackets to the wall, insert the Valance onto each Installation Bracket (as shown).

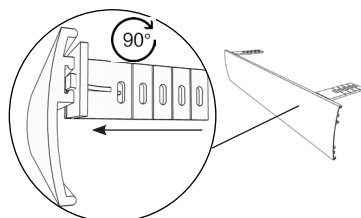


Turn the Valance Installation Bracket and insert at the top of the valance (as shown). Push in lightly to turn the Installation Bracket on a 90° angle until it is secured (facing up as shown).


INSIDE MOUNT

Using the Drill, secure the installation Brackets with the supplied screws (as shown).

For a flush inside mounted valance, be sure to leave enough space for the thickness of the valance.

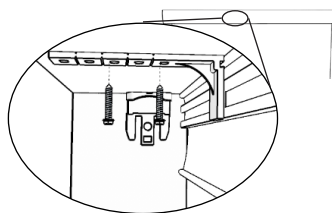

If the window depth does not accommodate a flush mount Installation Bracket, simply snap the bracket at the score as needed.

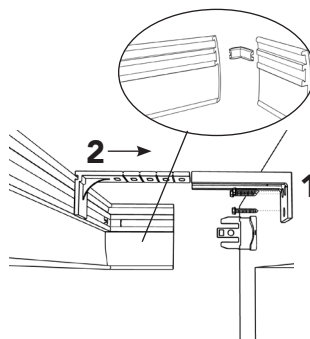


OUTSIDE MOUNT (if ordered)

Install the Outside Mount Bracket to the wall at an equal inbetween distance. Grab the valance with installed brackets and insert (as shown).


STEP 3

SHADE PLACEMENT


Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the right side installation bracket (as shown). You should hear a click once it is securely installed.

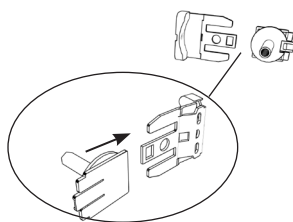

Grab second Idler and insert onto left side clutch opening (as shown).

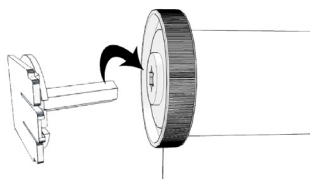


Grab the roller shade and insert the right side of the shade into the idler (as shown)

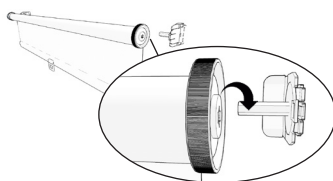

Insert the opposite end of the shade onto the bracket as shown;


THE RED PLASTIC TENSION HOLDER WILL DISENGAGE ONCE THE BRACKET HAS BEEN INSTALLED.

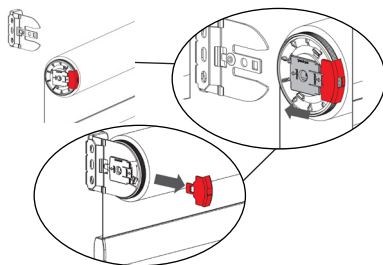

STEP 4

OPERATING INSTRUCTIONS

Pull the shade from the bottom handle and let go to lock it into the desired length.

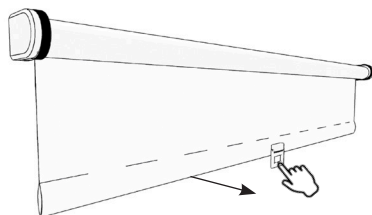


STEP 5


ADJUSTING TENSION

Your cordless shade was produced with the limits already set. If you need to change or adjust this at any time, please follow the steps below:

To lower tension or speed, turn the left side wheel towards the back of the shade.

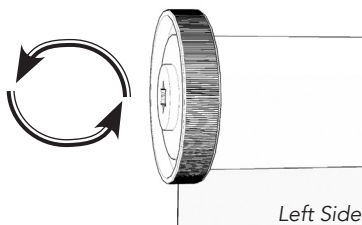

To add tension or speed, turn the left side wheel towards the front of the shade while holding the bottomrail

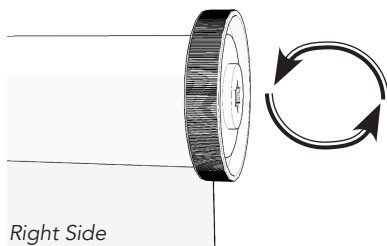

To shorten the length of the shade, turn the right side wheel towards the front of the shade.

To lengthed the shade, turn the right side wheel towards the back of the shade.



TROUBLESHOOTING

Shade is rolling up on tube unevenly or tracks:

If you notice the material winds unevenly and begins to track or telescope to one side check to ensure that the shade is level. If the shade is not level, remove it from the mounting brackets and shim or reinstall the brackets, as necessary.

IMPORTANT NOTE: Operating a shade that is not level will result in damage to the material. Damage caused by operating an unlevel shade is not covered under our normal warranty.

Roller Express Clutch Control Shade Installation Instructions

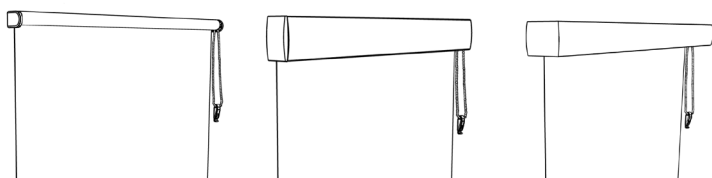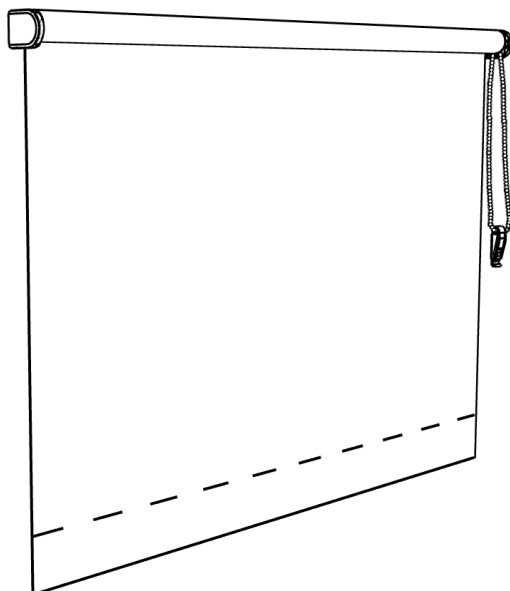

1. Clutch Control Open Roll
2. Clutch Control with Deco Fascia
3. Clutch Control with Contoured Valance


GETTING STARTED

Make sure you have all of the parts and tools required to install your shades.


Tools:

- Measuring Tape
- Power Drill
- #2 Phillips Screwdriver or
- ¼" Hex Head


General Parts to Install Your Shade:

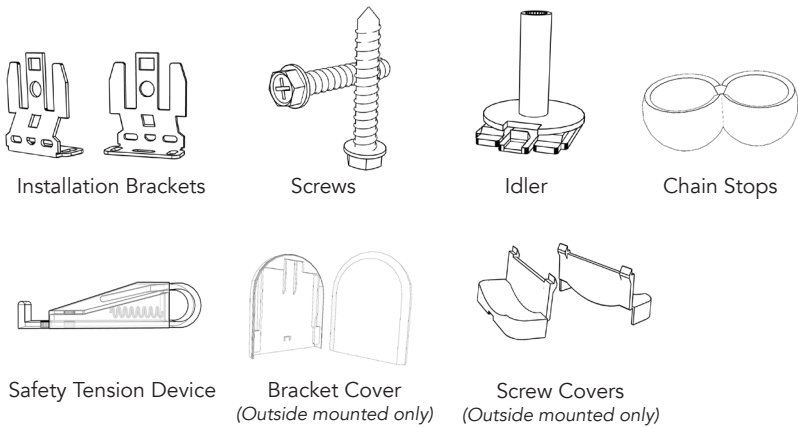

Deco Fascia Installation Parts (supplied if Deco Fascia was ordered):

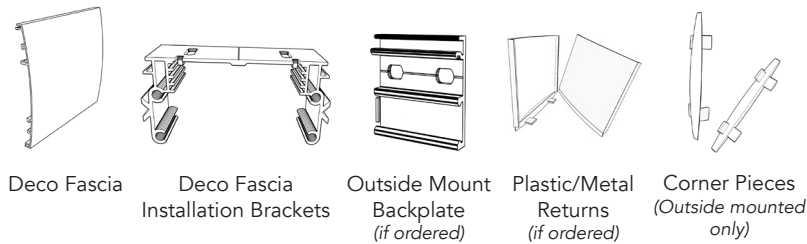


Contoured Valance Installation Parts (supplied only if optional items were ordered):

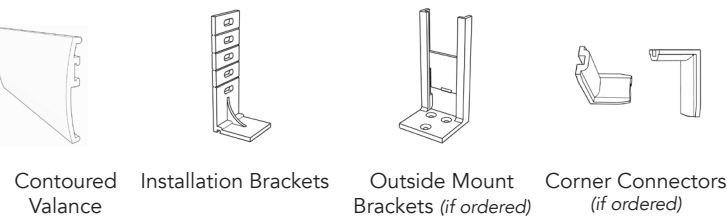

SECTION 1

CLUTCH CONTROL SHADE - OPEN ROLL

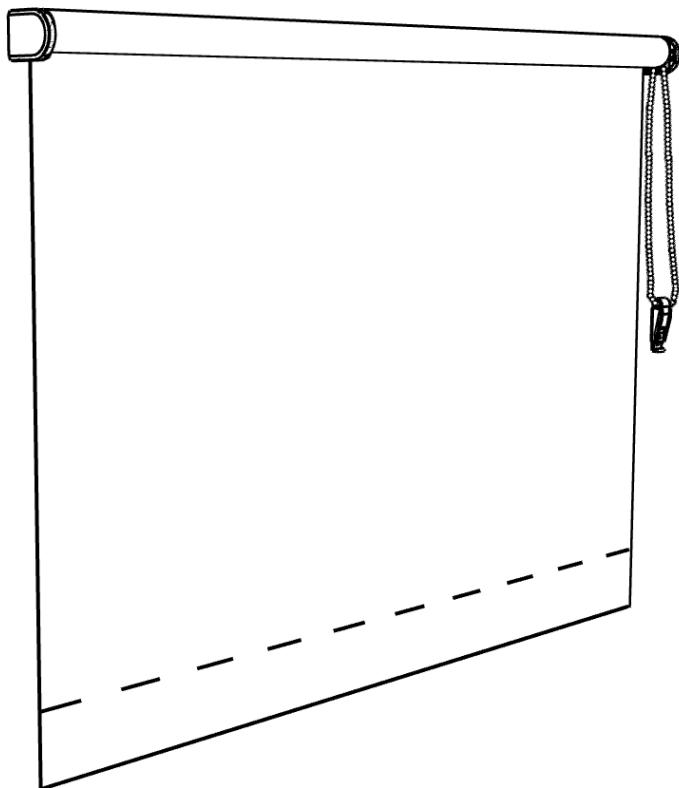

If your shades were ordered with Deco Fascia, proceed to Section 2


If your shades were ordered with Contoured Valance, proceed to Section 3

STEP 1


INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.

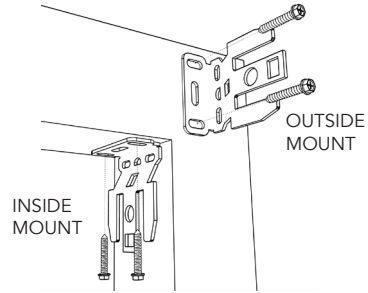

If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

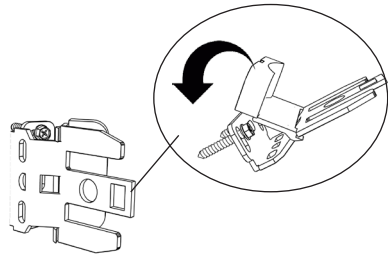


STEP 2

SHADE PLACEMENT

Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the non-chain side bracket (as shown). You should hear a click once it is securely installed.

Grab the roller shade and insert the non-chain side of the shade into the idler (as shown)


Insert the opposite end of the shade onto the bracket as shown.

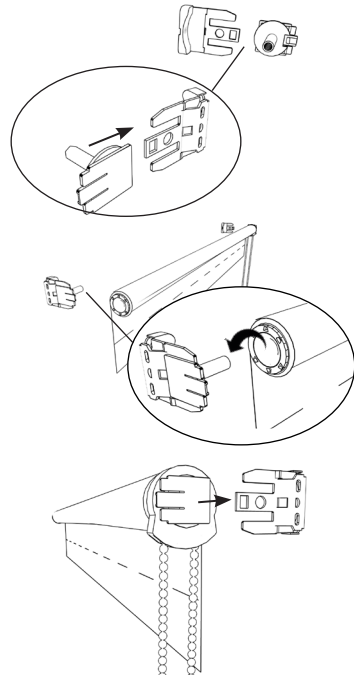

STEP 3

ADDITIONAL ITEMS


If your shade was ordered as Outside Mount, locate the bracket covers and install them onto the installation brackets as shown.

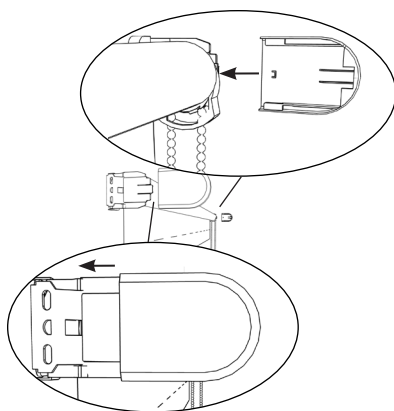


STEP 4

SET THE LIMITS

To set the Upper Limit of the shade, simply pull the back chain until the desired up position is reached. Snap the Chain Stop to the bead just below the clutch as shown.

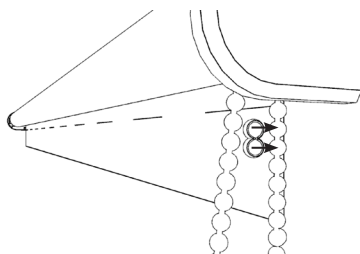

To set the Lower Limit of the shade, simply pull the front chain until the desired lowered position is reached. Snap the Chain Stop to the bead just below the clutch as shown.

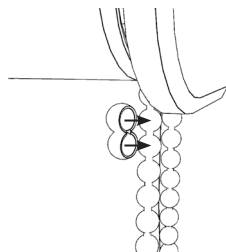


STEP 5

SAFETY TENSION DEVICE


Your roller shade was produced with an ANSI compliant safety tension device attached to the bead chain. This device must be securely mounted before the shade will operate properly.

- Slide the device to the bottom of the bead chain.
- Pull the device down until the bead chain is fully tensioned.
- Mark the screw hole location and secure in place.

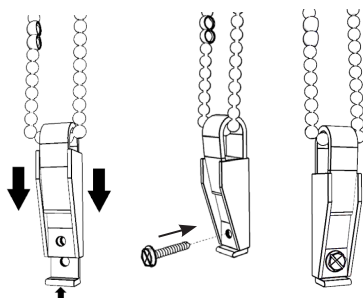

SECTION 2

CLUTCH CONTROL SHADE - WITH DECO FASCIA

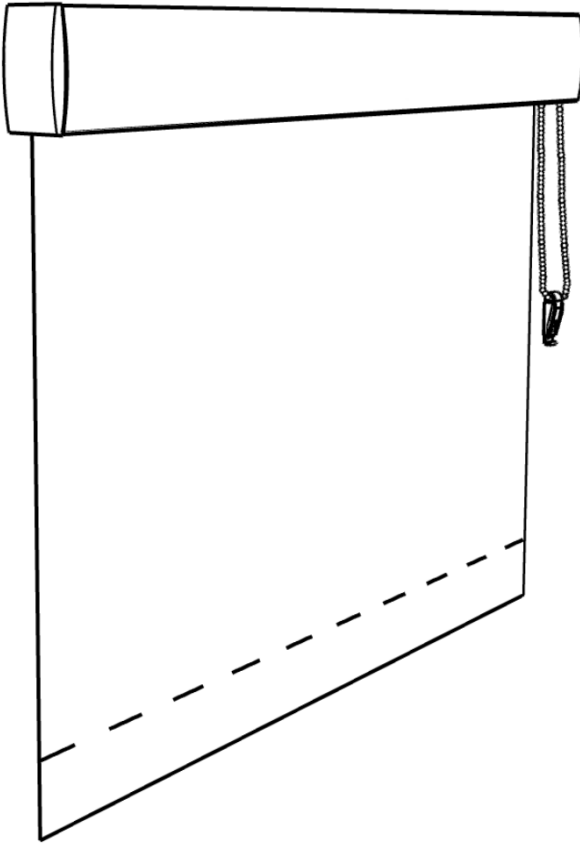


If your shades were ordered with Contoured Valance, proceed to Section 3
If your shades were ordered Open Roll, refer back to Section 1


STEP 1

DECO FASCIA BRACKET INSTALLATION

Using the Drill, secure the Fascia installation brackets with the supplied screws (as shown).

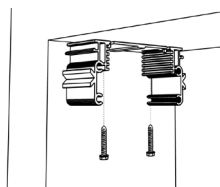

Inside Mount
(Vertical installation - Typical installation)

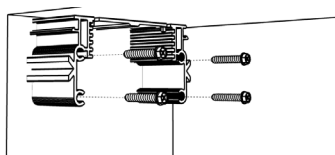

Inside Mount
(Horizontal installation - Possible with longer installation screws)

STEP 2


SHADE BRACKET INSTALLATION

Once the Fascia installation brackets are secured, insert the shade installation brackets into the slots of the Deco Fascia bracket as shown.

For outside mounted shades, the shade bracket should be inserted into the top slot. **Please note: The bracket should be inserted all the way into the slot in order for it to be positioned to stay in place.*

For inside mounted shades, the shade bracket can be moved up or down to perfectly level the shade as needed.


Outside Mount (Backplate Placement)

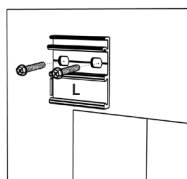

Using the drill secure the backplates to the opening - Each is marked Left or Right. Be sure to check that they are level.



Outside Mount (Fascia Bracket Placement)

Slide the Fascia bracket onto the outside mount bracket. Slide all the way to the edge of the bracket until it stops.

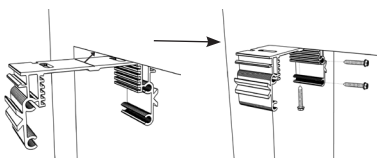

Inside Mount Shade- Outside Mount Bracket (Fascia Bracket Placement and installation)

Position the top line against the front edge of the wall then secure the bracket with installation screws as shown.

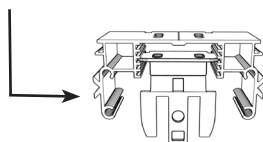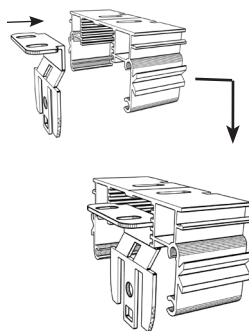


STEP 3

SHADE PLACEMENT

Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the non-chain side bracket (as shown). You should hear a click once it is securely installed.

Grab the roller shade and insert the non-chain side of the shade into the idler (as shown)

Insert the opposite end of the shade onto the bracket as shown.

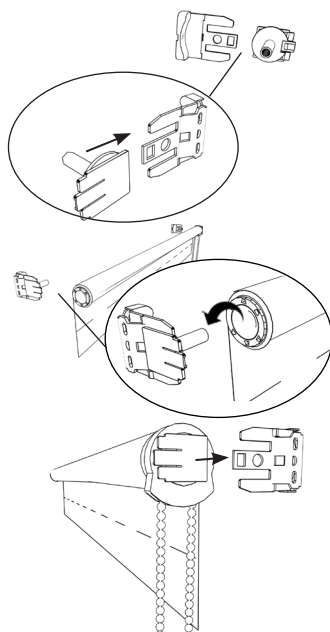


STEP 4

SET THE LIMITS

To set the Upper Limit of the shade, pull the back chain until the desired up position is reached. Snap the Chain Stop to the bead just below the clutch as shown.

To set the Lower Limit of the shade, pull the front chain until the desired lowered position is reached. Snap the Chain Stop to the bead just below the clutch as shown.

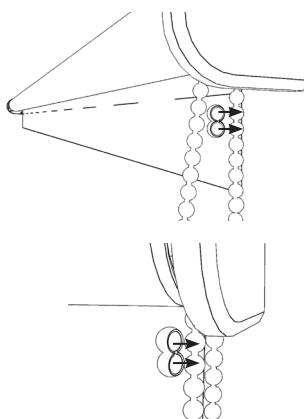


STEP 5

SAFETY TENSION DEVICE

Your roller shade was produced with an ANSI compliant safety tension device attached to the bead chain. This device must be securely mounted before the shade will operate properly.

- Slide the device to the bottom of the bead chain.
- Pull the device down until the bead chain is fully tensioned.
- Mark the screw hole location and secure in place.

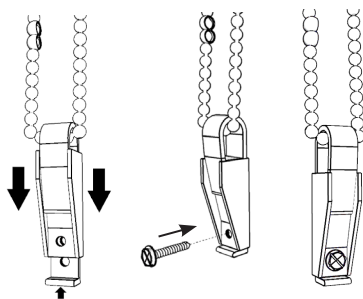


STEP 6

DECO FASCIA INSTALLATION

INSIDE MOUNT


Inside Mounted fascia can be installed by snapping the back groove onto the front notch of each installed Fascia bracket. *You will hear a click when it is installed*

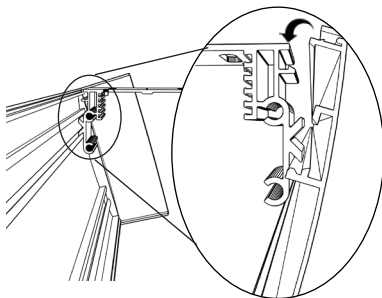

OUTSIDE MOUNT (if ordered)


Attach the return with the supplied connector.

- Metal returns will include a plastic corner connector (*outside mount only*)
- Plastic returns simply snap on the end of the fascia (*inside mount shade with outside mounted fascia*)

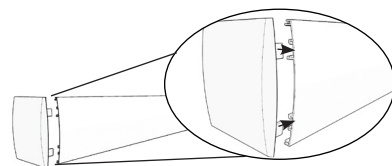


Plastic return installation

Install the fascia by snapping the back groove onto the front notch of each installed Fascia bracket. *You will hear a click when it is installed*

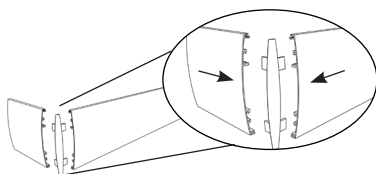


Metal return installation

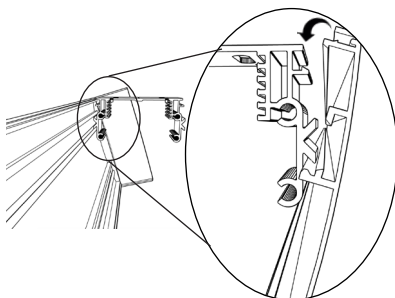

Fascia installation

SECTION 3

CLUTCH CONTROL SHADE
WITH CONTOURED VALANCE

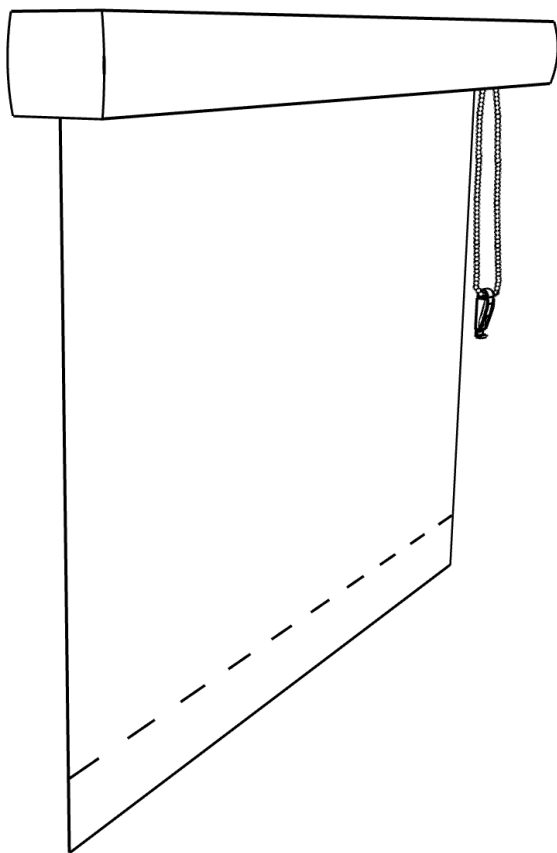

If your shades were ordered with Deco Fascia, refer back to Section 2
If your shades were ordered Open Roll, refer back to Section 1



STEP 1

INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.

If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

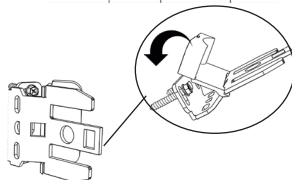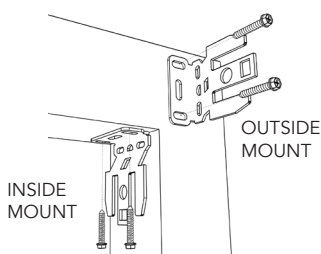

STEP 2

CONTOURED VALANCE INSTALLATION

Prior to installing the Installation Brackets to the wall, insert the Valance onto each Installation Bracket (as shown).

INSIDE MOUNT


Using the Drill, secure the installation Brackets with the supplied screws (as shown).

For a flush inside mounted valance, be sure to leave enough space for the thickness of the valance.



If the window depth does not accommodate a flush mount Installation Bracket, simply snap the bracket at the score as needed.

OUTSIDE MOUNT (if ordered)

Install the Outside Mount Bracket to the wall, spacing them evenly. Grab the valance with installed brackets and insert (as shown).

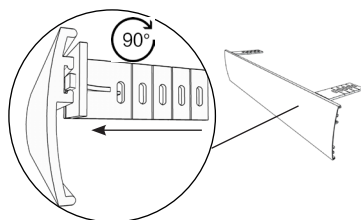

Turn the Valance Installation Bracket and insert at the top of the valance (as shown). Push in lightly to turn the Installation Bracket on a 90° angle until it is secured (facing up as shown).

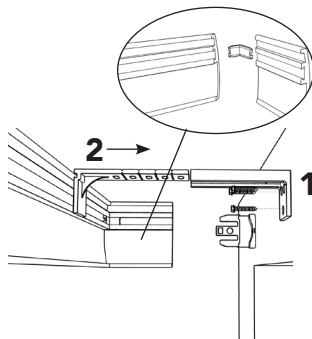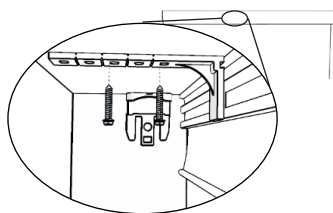


STEP 3

SHADE PLACEMENT

Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the non-chain side bracket (as shown). You should hear a click once it is securely installed.

Grab the roller shade and insert the non-chain side of the shade into the idler (as shown)

Insert the opposite end of the shade onto the bracket as shown.

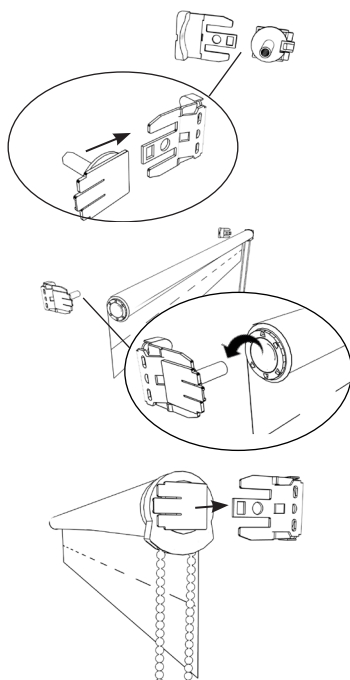


STEP 4

SET THE LIMITS

To set the Upper Limit of the shade, pull the back chain until the desired up position is reached. Snap the Chain Stop to the bead just below the clutch as shown.


To set the Lower Limit of the shade, pull the front chain until the desired lowered position is reached. Snap the Chain Stop to the bead just below the clutch as shown.

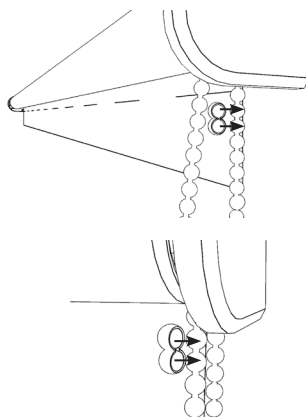

STEP 5

SAFETY TENSION DEVICE

Your roller shade was produced with an ANSI compliant safety tension device attached to the bead chain. This device must be securely mounted before the shade will operate properly.

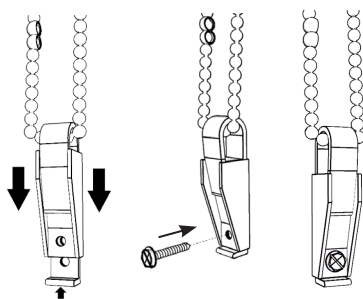

- Slide the device to the bottom of the bead chain.
- Pull the device down until the bead chain is fully tensioned.
- Mark the screw hole location and secure in place.


TROUBLESHOOTING

Shade is rolling up on tube unevenly or tracks:

If you notice the material winds unevenly and begins to track or telescope to one side check to ensure that the shade is level. If the shade is not level, remove it from the mounting brackets and shim or reinstall the brackets, as necessary.

IMPORTANT NOTE: Operating a shade that is not level will result in damage to the material. Damage caused by operating an unlevelled shade is not covered under our normal warranty.


⚠ WARNING

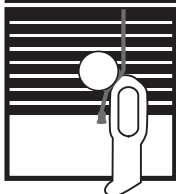

Window Blind Cord Can STRANGLE Your Child





To prevent strangulation, purchase
cordless products or products with
inaccessible cords

⚠ ADVERTENCIA

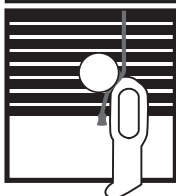

La cuerda ciega de la ventana
puede **ESTRANGULAR** su niño
Para evitar el estrangulamiento, compre
alternativas inalámbricas o productos
con cables inaccesibles

Roller Express Smart Motor Operated Shade Installation Instructions

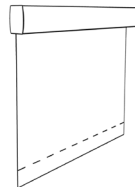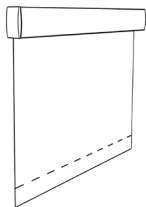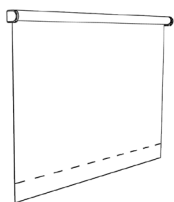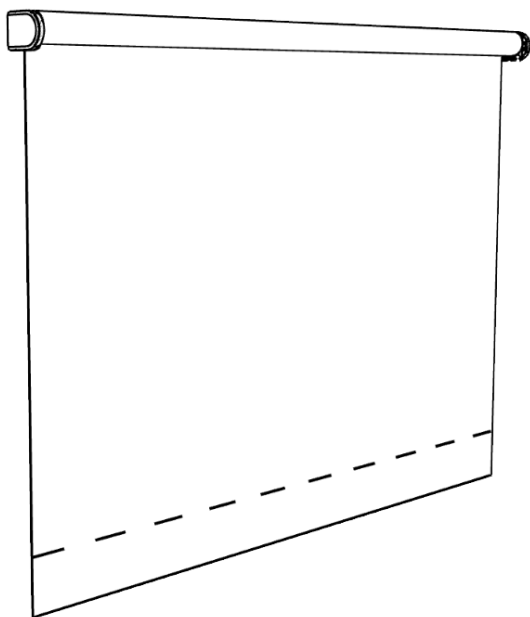

1. Motorized Operated Open Roll
2. Motorized Operated with Deco Fascia
3. Motorized Operated with Contoured Valance


GETTING STARTED

Make sure you have all of the parts and tools required to install your shades.


Tools:

- Measuring Tape
- Power Drill
- #2 Phillips Screwdriver or
- ¼" Hex Head


General Parts to Install Your Shade:

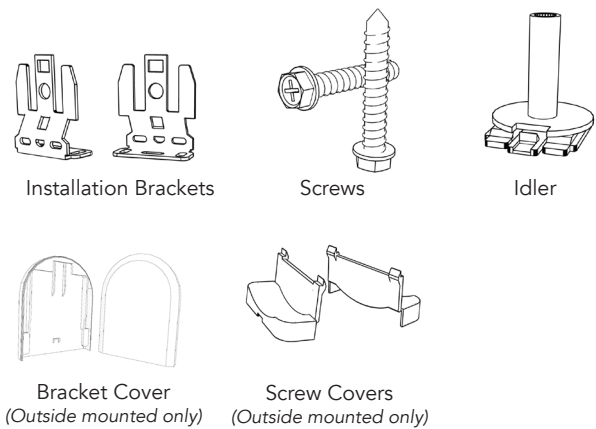

Deco Fascia Installation Parts (supplied if Deco Fascia was ordered):

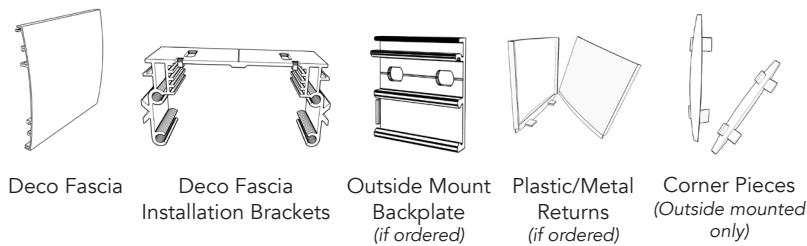


Contoured Valance Installation Parts (supplied only if Contoured Valance was ordered):

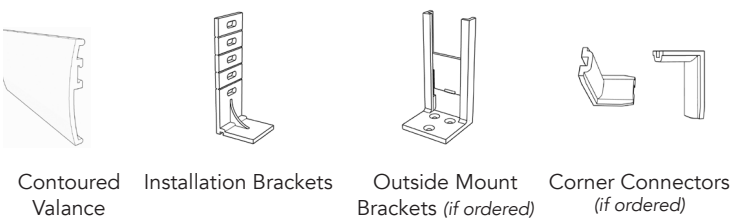

SECTION 1

MOTORIZED OPERATED SHADE - OPEN ROLL

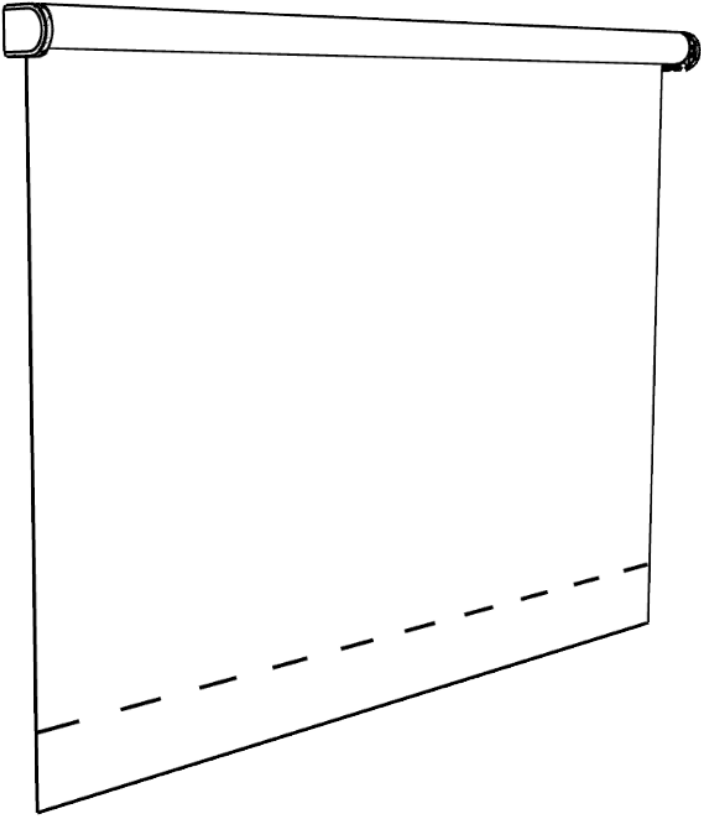

If your shades were ordered with Deco Fascia, proceed to Section 2
If your shades were ordered with Contoured Valance, proceed to Section 3


STEP 1

INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.

If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

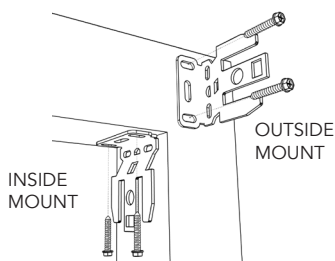





STEP 2

SHADE PLACEMENT

Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the left side bracket (as shown). You should hear a click once it is securely installed.

Grab the roller shade and insert the left side of the shade into the idler (as shown)


Insert the opposite end of the shade onto the bracket as shown.

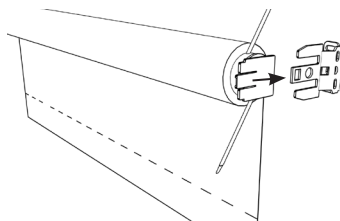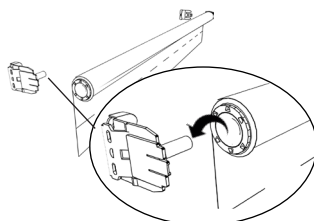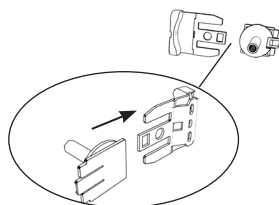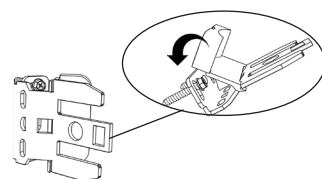

STEP 3


ADDITIONAL ITEMS

If your shade was ordered as Outside Mount, locate the bracket covers and install them onto the installation brackets as shown.

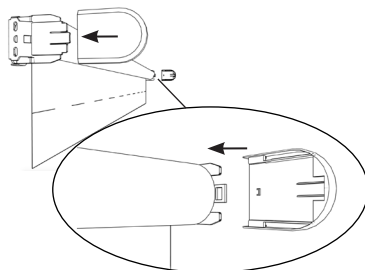

SECTION 2

SMART MOTOR SHADE - WITH DECO FASCIA

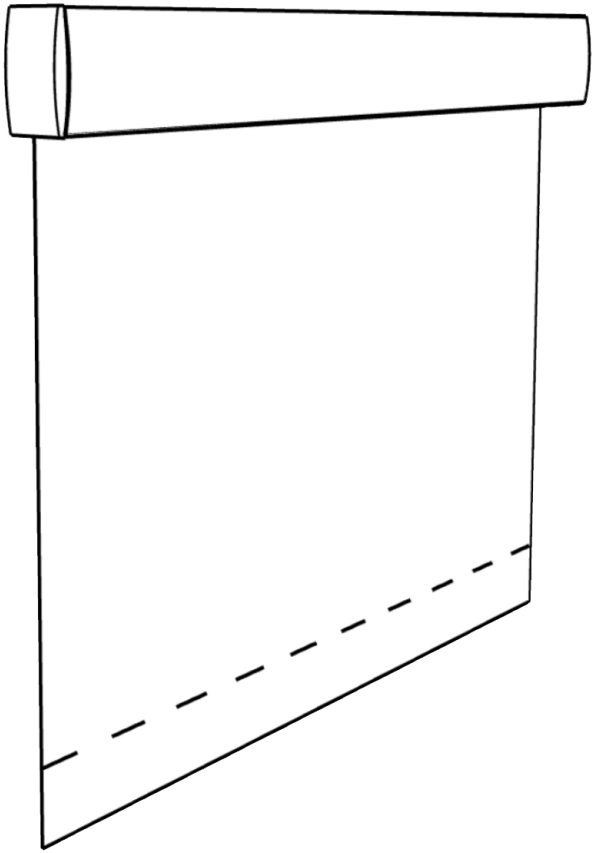


If your shades were ordered with Contoured Valance, proceed to Section 3
If your shades were ordered Open Roll, refer back to Section 1

STEP 1


DECO FASCIA BRACKET INSTALLATION

Using the Drill, secure the Fascia installation brackets with the supplied screws (as shown).

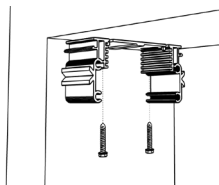

Inside Mount


(Vertical installation - Typical installation)

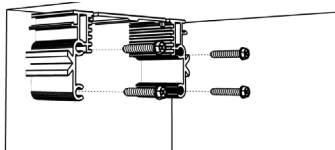

Inside Mount

(Horizontal installation - Possible with longer installation screws)


Outside Mount *(Backplate Placement)*

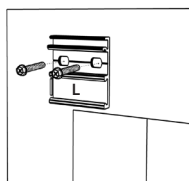

Using the drill secure the backplates to the opening - Each is marked Left or Right. Be sure to check that they are level.

Outside Mount *(Fascia Bracket Placement)*

Slide the Fascia bracket onto the outside mount bracket. Slide all the way to the edge of the bracket until it stops.

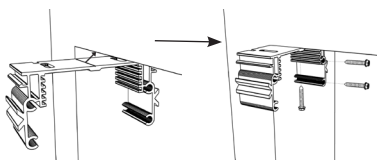

Inside Mount Shade- Outside Mount Bracket *(Fascia Bracket Placement and installation)*

Position the top line against the front edge of the wall then secure the bracket with installation screws as shown.




STEP 2

SHADE BRACKET INSTALLATION

Once the Fascia installation brackets are secured, insert the shade installation brackets into the slots of the Deco Fascia bracket as shown.

For outside mounted shades, the shade bracket should be inserted into the top slot. **Please note: The bracket should be inserted all the way into the slot in order for it to be positioned to stay in place.*


For inside mounted shades, the shade bracket can be moved up or down to perfectly level the shade as needed.

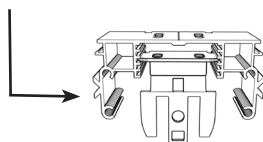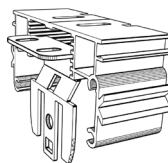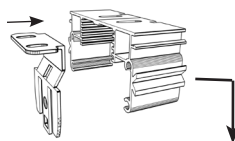


STEP 3

SHADE PLACEMENT


Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the left side bracket (as shown). You should hear a click once it is securely installed.

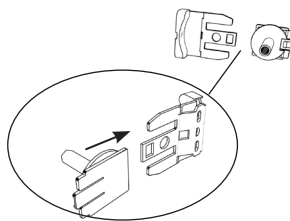

Grab the roller shade and insert the left side of the shade into the idler (as shown)

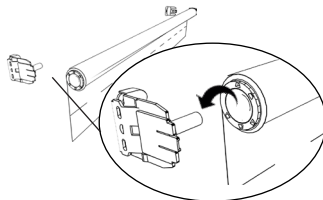

Insert the opposite end of the shade onto the bracket as shown.

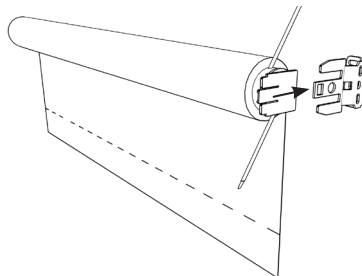


STEP 4

DECO FASCIA INSTALLATION

INSIDE MOUNT

Inside Mounted fascia can be installed by snapping the back groove onto the front notch of each installed Fascia bracket.

You will hear a click when it is installed

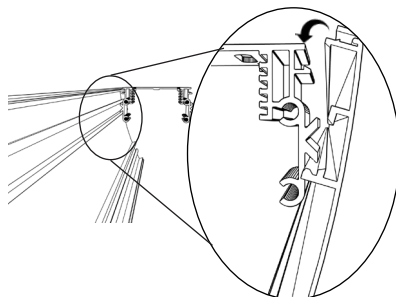

Proceed to next page for
Outside Mount installation

STEP 4 (continued)

**DECO FASCIA
INSTALLATION**


OUTSIDE MOUNT *(if ordered)*

Attach the return with the supplied connector.


- Metal returns will include a plastic corner connector *(outside mount only)*
- Plastic returns simply snap on the end of the fascia *(inside mount shade with outside mounted fascia)*

Install the fascia by snapping the back groove onto the front notch of each installed Fascia bracket.


You will hear a click when it is installed

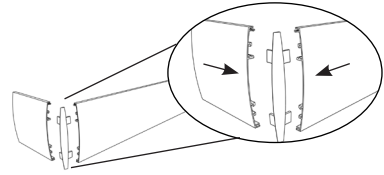

Metal return installation

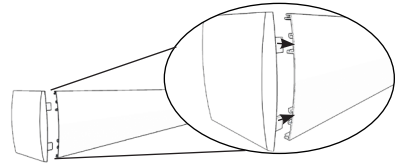


Plastic return installation

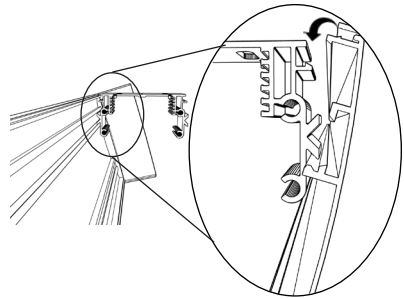

Fascia installation

SECTION 3

SMART MOTOR SHADE WITH CONTOURED VALANCE

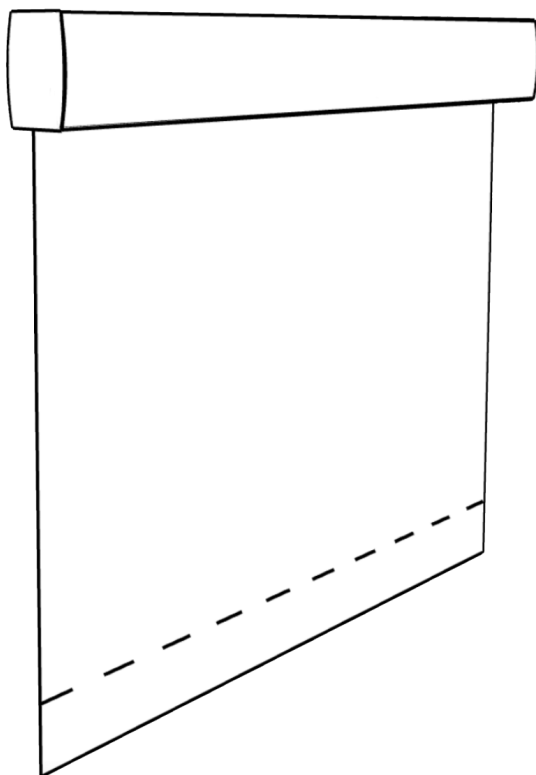

If your shades were ordered with Deco Fascia, refer back to Section 2
If your shades were ordered Open Roll, refer back to Section 1



STEP 1

INSTALLATION BRACKET PLACEMENT

Using the Drill, secure the roller shade installation brackets with the supplied screws (as shown).

Be sure to check that they are level.


If shade was ordered as Outside Mount, attach the supplied screw covers on to the bracket for a finished look.

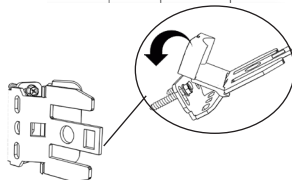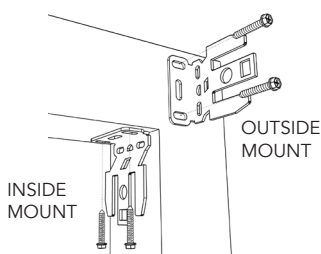

STEP 2

CONTOURED VALANCE INSTALLATION

Prior to installing the Installation Brackets to the wall, insert the Valance onto each Installation Bracket (as shown).

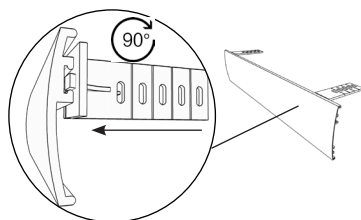


Turn the Valance Installation Bracket and insert at the top of the valance (as shown). Push in lightly to turn the Installation Bracket on a 90° angle until it is secured (facing up as shown).

INSIDE MOUNT

Using the Drill, secure the installation Brackets with the supplied screws (as shown).


For a flush inside mounted valance, be sure to leave enough space for the thickness of the valance.

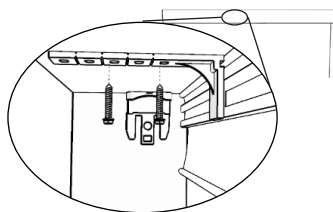

If the window depth does not accommodate a flush mount Installation Bracket, simply snap the bracket at the score as needed.

OUTSIDE MOUNT (if ordered)


Install the Outside Mount Bracket to the wall, spacing them evenly. Grab the valance with installed brackets and insert (as shown).

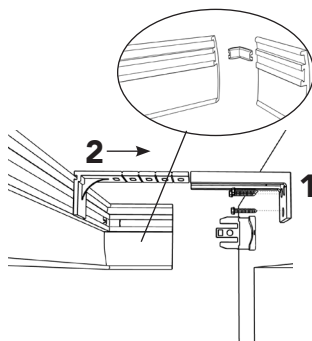


STEP 3

SHADE PLACEMENT


Once the brackets are secured and level, locate the Idler from the parts sent with your shade. Insert the Idler on to the left side bracket (as shown). You should hear a click once it is securely installed.

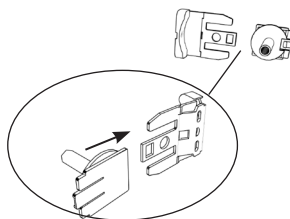

Grab the roller shade and insert the left side of the shade into the idler (as shown)

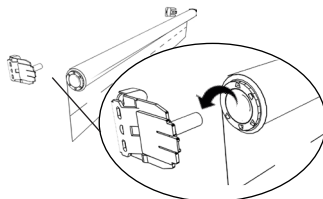

Insert the opposite end of the shade onto the bracket as shown.

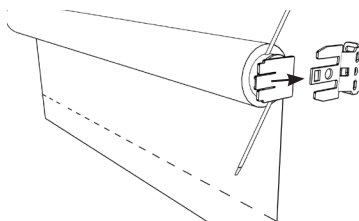

TROUBLESHOOTING

Shade is rolling up on tube unevenly or tracks:

If you notice the material winds unevenly and begins to track or telescope to one side check to ensure that the shade is level. If the shade is not level, remove it from the mounting brackets and shim or reinstall the brackets, as necessary.

IMPORTANT NOTE: Operating a shade that is not level will result in damage to the material. Damage caused by operating an unlevel shade is not covered under our normal warranty.

PROGRAMING INSTRUCTIONS

Refer to programing instructions included with your order. Online guides can be located using the QR codes below.

HOW TO GUIDES



Remote
Control Guide



Otto Recharge
Motor Guide



Otto 30/DC2
Motor Guide



App Set Up
Guide



Wifi Bridge
Set Up Guide



Recharge
Battery Pack

VIDEOS



Pairing and
Waking the
Motor



Setting &
Adjusting
Limits



Setting the
Favorite
Position



Locking &
Unlocking the
Remote



Group Shades
with P1 Button
on Motor



Group Shades
with P2 Button
on Remote