

BLINDSTER

Sheer Shadings with Continuous Chain Operation

INSTALLATION INSTRUCTIONS


STEP 1.

Check Package Contents. Missing part? Call 888-256-8672. Mounting hardware kit includes the following:

Part	Quantity
Mounting Brackets	3 (for shades 24" to 60" wide) 4 (for shades 60" to 90" wide) 5 (for shades over 90" wide)
1 1/2" Screws	2 per bracket
Screws for Tension Device	2 (1" Phillips head Tension Device 2 (3/8") per bracket for outside mount

STEP 2. TOOLS REQUIRED

Pencil, tape measure, level, screw driver, Scissors, pliers, step stool, drill.

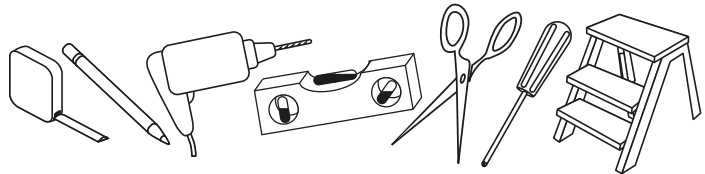

STEP 3. INSTALLATION

Your blind may be installed either inside the window frame or outside the window frame.


Wallboard or Plaster: Use wall anchors (not included).

Concrete, Stone, Brick: use a masonry drill bit and anchors or screws specifically designed for masonry (not included).

Inside Mounting:

One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets.

Attach each bracket to the inner top of the window opening using the screws provided. Pre-drill the screw holes using a 5/64" drill bit.


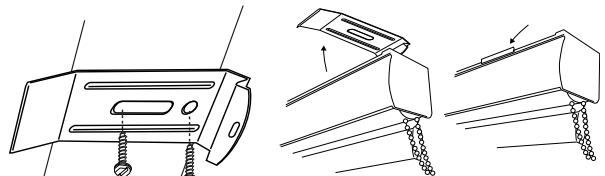


For flush inside mounts, attach the brackets to the head rail first (see drawings and attachment instructions below), and then position the shade in the window opening as desired. Then make pencil marks at the back of the head rail where each bracket is to be positioned. Align the brackets with the pencil marks, and then screw them in place as described above.

Outside Mounting:

Attach the 'L' shaped brackets to the wall or window framing as illustrated. One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets.


Pre-drill the screw holes using a 5/64" drill bit. The brackets must be level – use a Spirit Level if necessary to assure proper alignment.

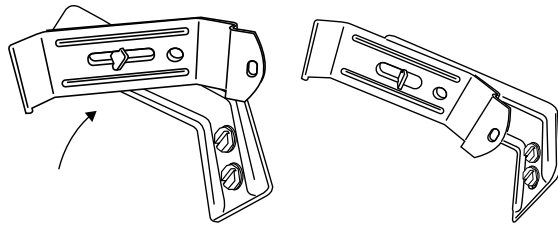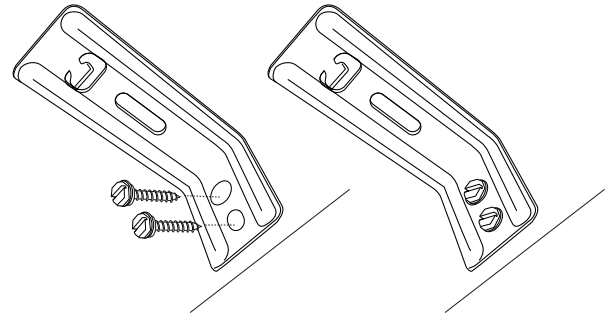

Now attach the brackets used for Inside Mount to each 'L' shaped bracket by placing the elongated slot of each bracket over the tab on the 'L' bracket and twist/turn it so that it becomes attached. The bracket can move forward or backward about 3/4" for fine tuning the projection of the head rail.

STEP 4. SECURING THE HEAD RAIL

Position the head rail so that the ridge on the top-front of the head rail fits into the front of the bracket as illustrated, and then push upward until the metal tabs on the back of the bracket snap onto the back of the head rail.

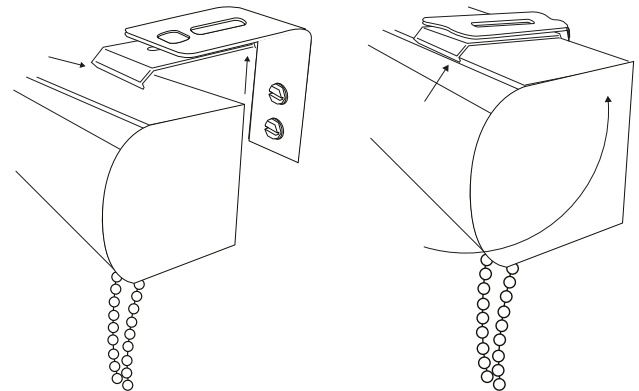

STEP 5. INSTALL THE CHAIN TENSION DEVICE

The Tension Device must be attached per these instructions in order for your shade to function properly. Carefully unwrap the control cord/chain and tension device. Cut and remove the zip-tie.

While holding the tension device in one hand, pull the plunger away from the bead chain with the other hand. Lift the bead chain out of the bead locking groove and slide the tension device to the bottom of the chain loop. Pull the tension device down until the bead chain is fully tensioned (plunger will be at the top) and then move the tension device up approximately 1/8". Mark the screw locations on the wall or window frame with a pencil.


Inside Mount:

If mounting into wood, predrill screw holes and then install the tension device using the 1" Phillips head screws provided. If not securing into wood, use appropriate anchors for the substrate and follow the anchor manufacturer's instructions.

Outside Mount:

Align the mounting bracket screw holes with the pencil marks. If mounting into wood, predrill screw holes and then install the mounting bracket using the 1" Phillips head screws provided. If not securing into wood, use appropriate anchors for the substrate and follow manufacturer's instructions.

Press the tension device onto the mounting bracket posts. Carefully install the 3/8" Phillips head screws provided, through the tension device into the mounting bracket using a Phillips head screwdriver.

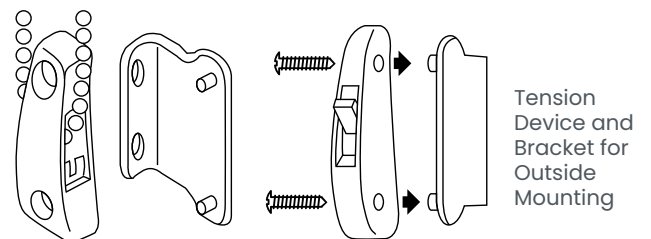

DO NOT OVER-TIGHTEN!

STEP 6. HOW TO OPERATE

Pulling the cord smoothly and slowly in one direction raises the shade; pulling it in the other direction lowers it. On shades where the fabric rolls against the window, the front cord lifts the shade. On shades where the fabric rolls toward the room, the rear cord lifts the shade.

Cleaning

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush or upholstery attachment. For spot cleaning, use warm (not hot!) water with a mild soap to damp clean.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-888-256-8672

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered:

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds.

5 years: All fabric

Not Covered:

Normal Wear and Tear

Any product that fails due to: abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse.

Natural wood products that have: loss of color intensity

• yellowing or cracking of plastic parts or foam wood product • variations in color, grain, or texture • warping of wood slats in high humidity areas.

Costs associated with: product removal

• transportation to and from the retailer • brand label removal • product remeasure • incidental or consequential damages • product reinstallation • shipping.

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

To Report Shipping Damage:

If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

To Obtain Service:

If you suspect this product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy:

THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY. If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following

- Repair the product • Replace the product • Refund the cost of the product


Colors vary from lot to lot and may not exactly match sample swatch or previous purchases. Discontinued items or color selections will be replaced with the closest equivalent current product.

YOUR RIGHTS UNDER STATE LAW:

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you.

No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

⚠ WARNING

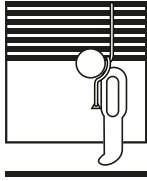

Window Blind Cord Can **STRANGLE** Your Child

- Children can climb furniture to reach cords.
- Move crib and furniture away.
- Keep all cords out of children's reach.
- Attach tension device to wall or floor.
- Fasteners provided with tension device may not be appropriate for all mounting surfaces.
- Use appropriate anchors for the mounting surface conditions.

Motorized Sheer Shadings Installation Instructions

INSTALLATION INSTRUCTIONS

INSTALL THE SHADE BEFORE ATTEMPTING TO OPERATE THE MOTOR.


STEP 1.

Check Package Contents. Missing part? Call 888-256-8672. Mounting hardware kit includes the following:

Part	Quantity
a. Mounting Brackets	3 (for shades 24" to 60" wide) 4 (for shades 60" to 90" wide) 5 (for shades over 90" wide)
b. 1/4" Screws	2 per bracket

STEP 2. TOOLS REQUIRED

Pencil, tape measure, level, screw driver, pliers, step stool, drill.

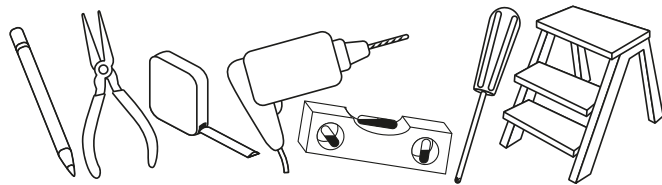


STEP 3. INSTALLATION

Your blind may be installed either inside the window frame or outside the window frame.

Wallboard or Plaster: use wall anchors (not included).
Concrete, Stone, Brick: use a masonry drill bit and anchors or screws specifically designed for masonry (not included).

Inside Mounting:

One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets. Attach each bracket to the inner top of the window opening using the screws provided. Pre-drill the screw holes using a 5/64" drill bit.

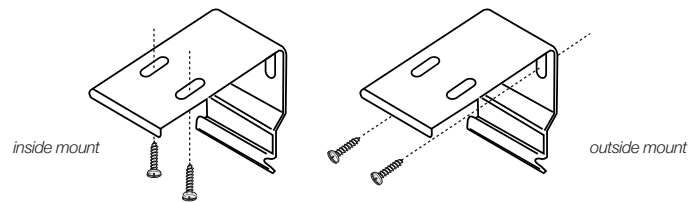


For flush inside mounts, attach the brackets to the head rail first (see drawings and attachment instructions below), and then position the shade in the window opening as desired. Then make pencil marks at the back of each bracket. Align the brackets with the pencil marks, and then screw them in place as described above.

Outside Mounting:

Attach the Brackets to the wall or window framing. One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets. Pre-drill the screw holes using a 5/64" drill bit. The brackets must be level – use a Spirit Level if necessary to assure proper alignment.

STEP 4. SECURING THE HEAD RAIL

Position the head rail so that the ridge on the top-front of the head rail fits into the front of the bracket as illustrated, and then push upward until the metal tabs on the back of the bracket snap onto the back of the head rail.

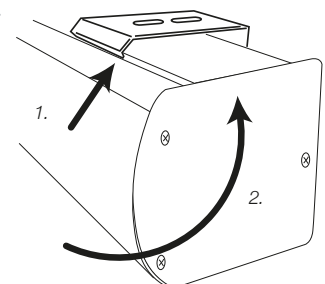

Operating the Shade

IMPORTANT

See the dedicated programming and operating instructions that came with the shade.

If you cannot locate these instructions, please call Customer Service.

CUSTOMER SERVICE: 1-888-256-8672

To Tilt the Fabric Vanes:

The fabric vanes can only be tilted when the shade is in the DOWN position. When the shade is fully lowered, press the UP button and then quickly press STOP to set the vanes at the desired angle to filter light per personal preference.

Cleaning

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush or upholstery attachment. For spot cleaning, use warm (not hot!) water with a mild soap to damp clean.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call: 1-888-256-8672.

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function.

3 Years: Cords, including internal cords such as those found in cordless blinds or shades.

5 Years: All fabric

3 Years: Battery Operated Motors

Not Covered

1. Normal wear and Tear

2. Any product that fails due to:

- Abuse • Alterations • Exposure to salt air • Improper cleaning • Improper installation • Misapplication • Accident • Damage from pests/insects/pets • Extraordinary use • Improper handling • Improper operation • Misuse

3. Natural Wood Products that have:

- Loss of color intensity • Variations in color, grain or texture • Warping of wood slats in high humidity areas


4. Costs associated with:

- Product removal • Transportation to and from the retailer • Brand label removal • Product re-measure • Product reinstallation • Shipping • Incidental or consequential damages

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced

To Report Shipping Damage:

If damage occurred during shipping, call the place of purchase and report within 7 calendar days, or you may be denied credit for your damaged product.

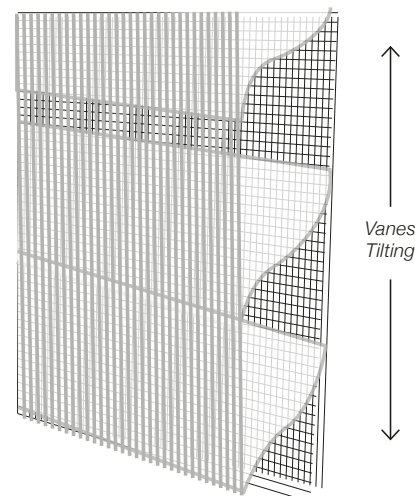

To Obtain Service:

If you suspect this product has a manufacturing defect in materials or workmanship:

- Locate the sales receipt
- Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy:

This shall be your sole remedy under this limited warranty.

If this product is found to have a manufacturing defect in materials or workmanship, we will, at our discretion, do one of the following:

- Repair the product
- Replace the product
- Refund the cost of the product

Colors may vary from lot to lot and may not exactly match sample swatches or previous purchases.

Discontinued items or color selections will be replaced with the closest equivalent current product.


Your rights under state law: This lifetime limited warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you. No agent, representative, dealer or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions

Motor Programming Quick Start Guide

NOTE: THE SHADES' MOTORS ARE PARTIALLY CHARGED TO ENABLE PROGRAMMING. ADDITIONAL CHARGING REQUIRED AS FINAL STEP.


Get familiar with your new motor and remote control

MOTOR

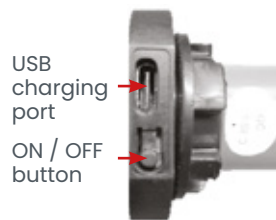


REMOTE CONTROL

Channel selection display varies, depending on remote control model

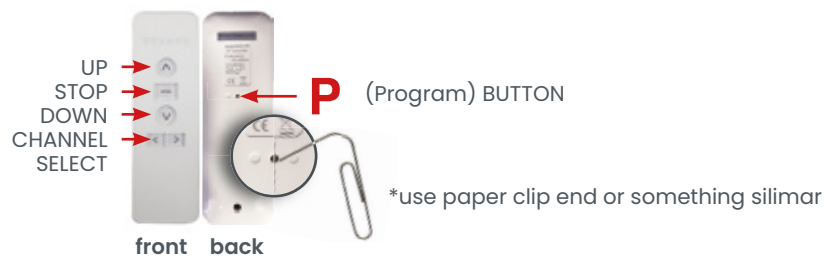

STEP 1.

Select a CHANNEL on the remote control

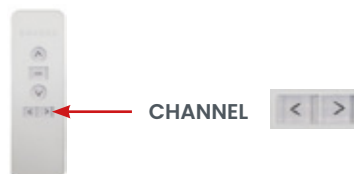

STEP 2.

POWER ON motor and link your remote control



Press and hold the **ON/OFF button** on the motor for 2 seconds. Release after the red LED flashes once. Your shades' motor is now on.



Press and hold the **ON/OFF button** on the motor AGAIN for 2 seconds. Release after the shade jogs once.






Press the **UP button** on your remote control. The motor will jog once as confirmation. Your remote is now linked.





STEP 3.

**Set UPPER LIMIT
(when shade is fully raised)**






Press and hold the **DOWN button**  for 2 seconds to lower shade 6" below desired upper limit then **STOP button** 


6" BELOW DESIRED UPPER LIMIT 




Press **P button** once and hold for 2 seconds. The shade will jog once as "program mode" confirmation.



Press and hold the **UP button**  for 2 seconds to raise shade then **STOP button**  at desired upper limit.


DESIRED UPPER LIMIT 





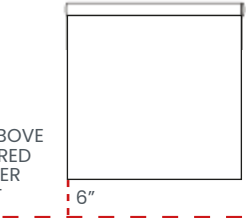
Press **P button** once and hold for 2 seconds. The shade will jog once as "set mode" confirmation.


STEP 4.


**Set LOWER LIMIT
(when shade is fully lowered)**




Press and hold the **DOWN button**  for 2 seconds to lower shade then **STOP button** 



6" above desired lower limit 


6" ABOVE DESIRED LOWER LIMIT 





Press **P button** once and hold for 2 seconds. The shade will jog once as "program mode" confirmation.



Press and hold the **DOWN button**  for 2 seconds to lower shade then **STOP button** 

at desired lower limit. 

DESIRED LOWER LIMIT 



Press **P button** once and hold for 2 seconds. The shade will jog once as "set mode" confirmation.

FINAL STEP

CHARGE each motor 8 hours to fully charge battery

Congratulations!

You have programmed your new motorized shade.

See the detailed instructions (included with your shade) for additional programming & operating options; for example, setting an intermediate limit, adjusting or erasing limits, programming multiple shades on a single channel, etc.